



### STEP 2:

For safety, begin by turning off the breaker or removing the fuse from your electrical panel.

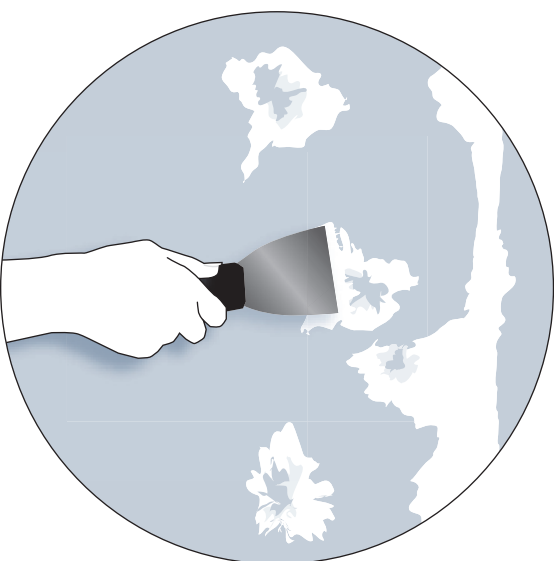

### STEP 4:

Be sure to fill in any holes or other small imperfections with spackle. Let the area dry thoroughly before sanding.

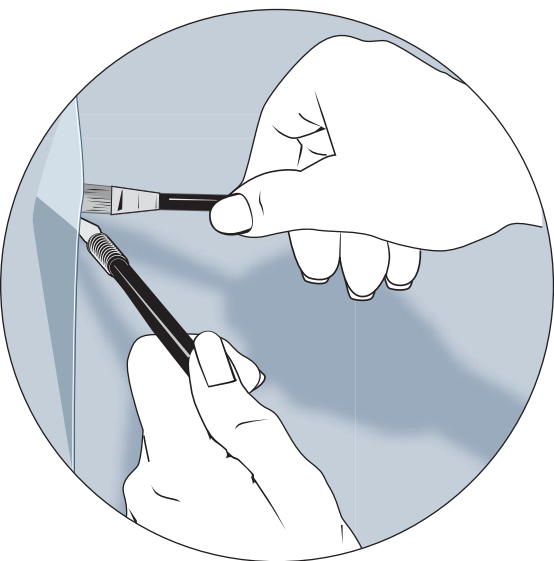

### STEP 8:

Repair any minor blisters or bubbles that may have formed overnight. Slit them with a utility knife and reattach them to the wall with wallpaper paste.